



**Bowl**  
L675DEC#526 (4½"), 7 oz., 4 Doz.



**Bowl**  
L675DEC#950 (4¼"), 9 oz., 4 Doz.  
L675DEC#951 (5"), 15 oz., 4 Doz.  
L675DEC#952 (5¾"), 22 oz., 2 Doz.



**Dip / Sauce Dish / Ramekin**  
L675DEC#941 (2½"), 2 oz., 12 Doz.



**Dish**  
L675DEC#942 (3¼"), 2 oz., 10 Doz.



**Square / Triangular Sauce Dish**  
L675DEC#940 (2¾"), 2 oz., 6 Doz..



**3-Compartment Dish**  
L675DEC#920 (4¾"), 3 oz., 2 Doz.



**Small Tapas Spoon / Dish**  
L675DEC#943 (3"), 2 oz., 6 Doz.



**Casserole**  
L675DEC#676 (6½"), 16 oz., 1 Doz.



**Casserole**  
L675DEC#675 (6¾"), 8 oz., 1 Doz.



**Rectangular Baker w/ Handles**  
L675DEC#990 (6½"), 7 oz., 1 Doz.  
L675DEC#991 (9¾"), 17 oz., 6 Ea.



**Mini Baker w/ Handles**  
L675DEC#981 (3¾"), 3 oz., 4 Doz.



**Salt Shaker**  
L675DEC#910 (1½"), 6 Doz.  
**Pepper Shaker**  
L675DEC#911 (1½"), 6 Doz.