


ADA Table Top Instructions

MOUNTING THE BASES FOR ADA COMPLIANCE

1. FOR A 30X48" TOP
PLACE THE BASES AS FAR APART
AS POSSIBLE
2. NOTE THAT THE SPIDER MUST BE
TURNED TO A 45° ANGLE
FROM THE BASE FOOT

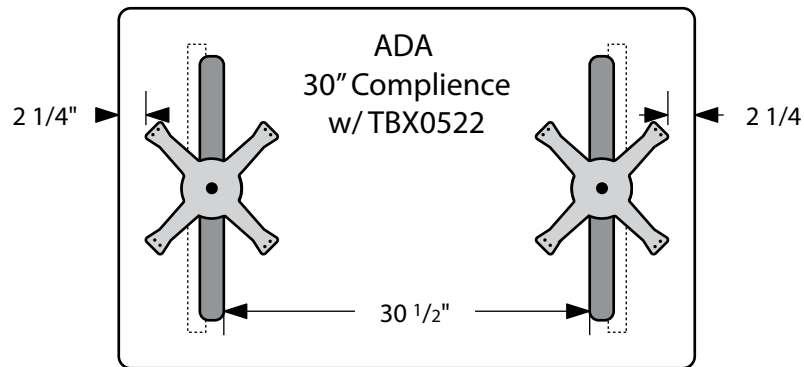

APPLYING THE ADA DOME STICKER

1. CLEAN SURFACE OF TABLE TOP
BEFORE APPLICATION OF LABEL
2. REMOVE LABEL FROM
BACKING SHEET
3. POSITION THE DOME LABEL
2" FROM THE OUTSIDE OF
THE TOP AT THE CENTER OF
THE LENGTH OF THE TABLE
TOP.
4. APPLY FIRM PRESSURE OVER
THE LABEL TO FIRMLY ACTIVATE
THE PRESSURE SENSITIVE ADHESIVE

